


INSTRUCTIONS :

1. Beware to the inlet and outlet directions while mounting the valve.
2. Pressure values are adjusted sensitively so do not change the adjustment.
3. The top cover of the valve has not to be opened. Do not loosen or tighten the bolt and nut.
4. Unauthorized people must not interfere to the valve.

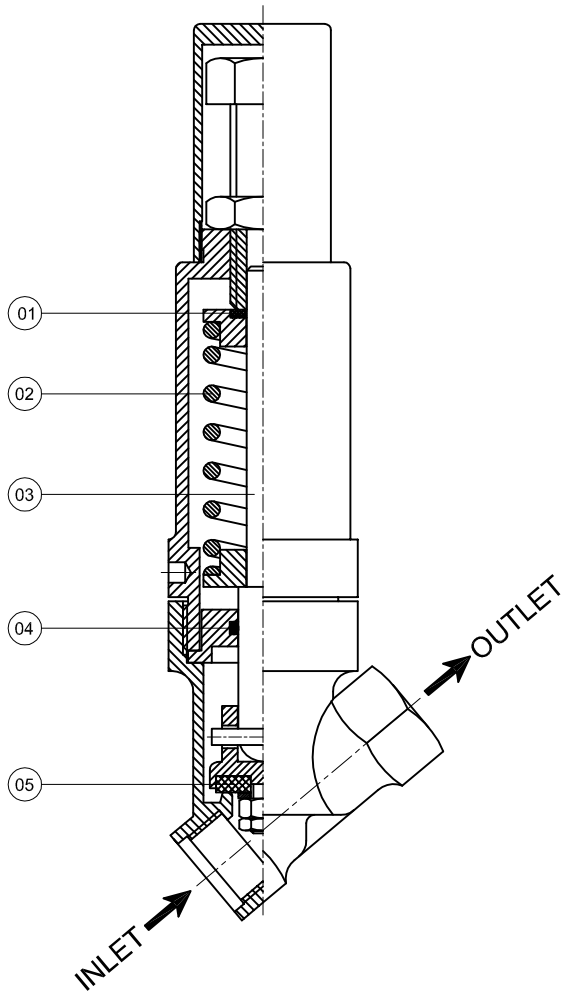

For the spare part orders, notifying us about the part number at the chart below and also the serial number on the valve are adequate.

PART NO	PART NAME	MATERIAL
01	WASHER	PTFE
02	SPRING	INOX
03	STEM	INOX
04	O-RING	SILIKON
05	SEAT SEAL	VITON

