
## STAINLESS STEEL MANUAL VALVE BUTT WELDED LINEAR FLOW (Y TYPE)



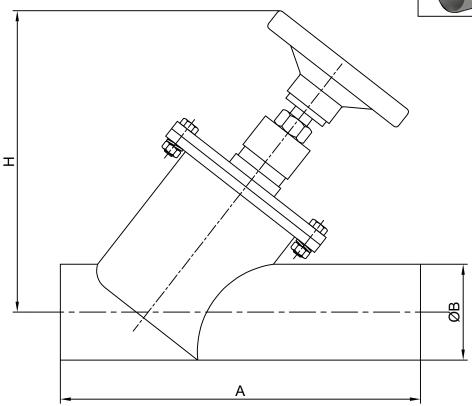




| DN  |               | Α   | Н   | ØB    | <b>K</b> v<br>m³/h |
|-----|---------------|-----|-----|-------|--------------------|
| 65  | <b>2</b> 1/2" | 286 | 295 | 76.1  | 84                 |
| 80  | 3"            | 306 | 310 | 88.9  | 126                |
| 100 | 4"            | 345 | 340 | 114.3 | 197                |
| 125 | 5"            | 395 | 385 | 139.7 | 308                |
| 150 | 6"            | 475 | 400 | 168.3 | 445                |



## **SERIES: 100**

## **INSTRUCTIONS:**

- 1. Valve can be fitted in any position.
- 2. Flow direction should be as indicated by an arrow on the body.
- 3. CAUTION: Never fasten or remove the assembly nut prior to turning the handwheel to the opening direction.

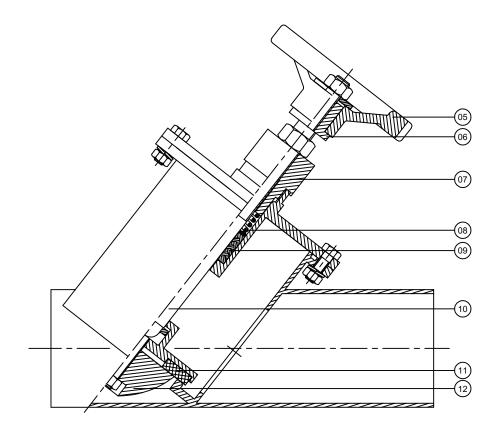

For the spare part orders, notifying us about the part number at the chart below and also the serial number on the valve are adequate.

| SPARE PART LIST |                     |          |  |  |
|-----------------|---------------------|----------|--|--|
| PART<br>NO      | PART NAME           | MATERIAL |  |  |
| 05              | HANDWHEEL           | INOX     |  |  |
| 06              | HANDWHEEL NUT       | INOX     |  |  |
| 07              | STUFFING BOX NUT    | INOX     |  |  |
| 08              | STUFFING BOX SPRING | INOX     |  |  |
| 09              | STUFFING BOX SET    | PTFE     |  |  |
| 10              | SHAFT & SEAL HOLDER | INOX     |  |  |
| 11              | SEAT SEAL           | PTFE     |  |  |
| 12              | PROPORTIONAL CONIC  | INOX     |  |  |

