

DN		Α	G	Н	Kv m³/h
65	2 1/2"	255	2 1/2"	295	84
80	3"	275	3"	310	126
100	4"	350	4"	340	197
125	5	400	5"	385	308




INSTRUCTIONS / SPARE PARTS

SERIES : 100

INSTRUCTIONS:

- 1. Valve can be fitted in any position.
- 2. Flow direction should be as indicated by an arrow on the body.
- 3. CAUTION : Never fasten or remove the assembly nut prior to turning the handwheel to the opening direction.

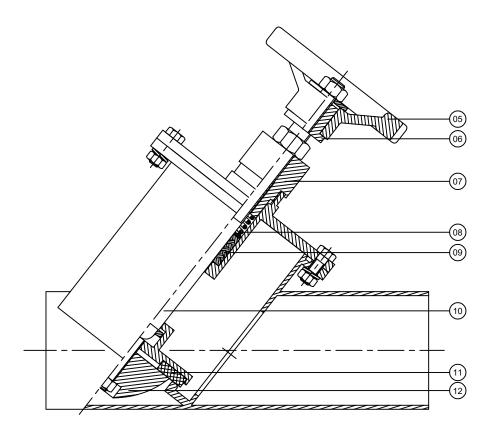

For the spare part orders, notifying us about the part number at the chart below and also the serial number on the valve are adequate.

SPARE PART LIST				
PART NO	PART NAME	MATERIAL		
05	HANDWHEEL	INOX		
06	HANDWHEEL NUT	INOX		
07	STUFFING BOX NUT	INOX		
08	STUFFING BOX SPRING	INOX		
09	STUFFING BOX SET	PTFE		
10	SHAFT & SEAL HOLDER	INOX		
11	SEAT SEAL	PTFE		
12	PROPORTIONAL CONIC	INOX		

